

Setup Tips

Caster

Caster is an alignment measurement on the front suspension that relates the tyre contact patches to the steering axis. As caster increases, the forces attempting to straighten the steering wheel will increase.

Caster changes are best used to adjust the amount of steering feedback the driver wants to feel.

This effect is generally positive until instability occurs in corner exit or all the way through high-speed corners.

Note: On many cars when a caster adjustment is made the camber setting may also change.